



Tagital T9X Volume, power, or return button Replacement

A simple and quick replacement guide for any broken buttons on the Tagital T9X tablet.

Written By: Adam Bamforth



INTRODUCTION

This guide will show how to replace the volume button on your Tagital T9X tablet.


TOOLS:

- [64 Bit Driver Kit](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



- With the tablet turned off, remove the two 5mm Phillips head screws from the top of the tablet.


 These screws are extremely easy to lose. Be sure to store them in a safe place.

Step 2



- Use a 1 cm wide plastic opening tool to remove the back panel. Go around the entire back panel to ensure safe removal.
- The power, return, and volume buttons are not firmly secured to the panel; it is likely they will fall off in the process of removing the panel.

Step 3 — Volume, power, or return button

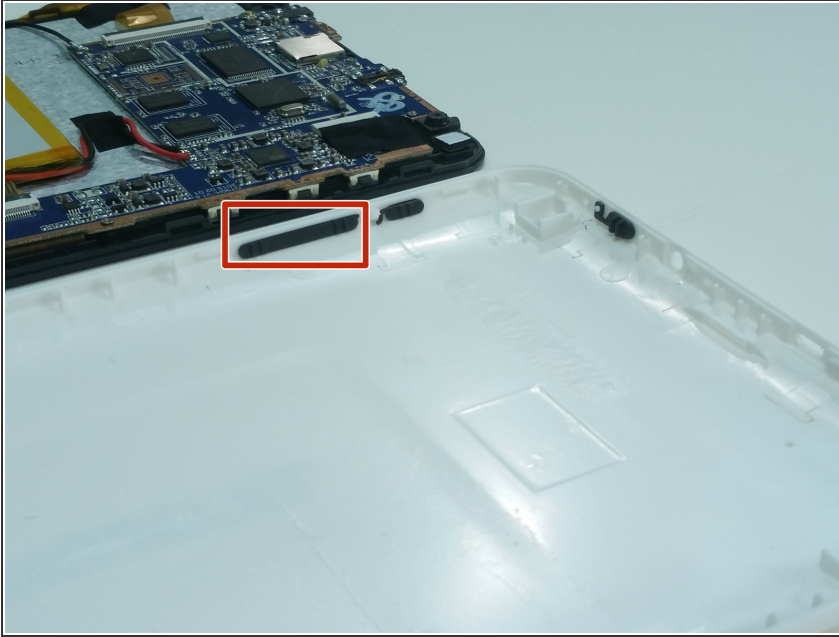

- Remove the broken volume button from the plastic case. Replace it with the new volume button, with the + being closer to the camera opening.

ⓘ There are two other small buttons that look very similar to one another; if they fall off as well, put them back in their rightful place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 07:38:16 PM.